

**USER'S MANUAL**

## Safety Information

### IMPORTANT SAFETY INSTRUCTIONS

Read these instructions.  
Keep these instructions.  
Heed all warnings.  
Follow all instructions.  
Do not use this apparatus near water.  
Clean only with dry cloth.  
Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.  
Only use a grounding plug in a grounded socket.  
Protect the power cord from being walked on or pinched particularly at the plugs, convenience receptacles, and at the point where they exit from the apparatus.  
Only use attachments/accessories specified by the manufacturer.  
Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart or rack is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.



Unplug the apparatus during lightning storms or when unused for long periods of time.

Refer all servicing to qualified personnel. Servicing is required when the apparatus has been damaged in any way, such as power supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.

**CAUTION:** These servicing instructions are for use by qualified service personnel only. To reduce the risk of electric shock, do not perform any servicing other than that contained in the operating instructions unless you are qualified to do so.

**WARNING :** To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture. The apparatus shall not be exposed to dripping or splashing and that objects filled with liquids, such as vases, shall not be placed on apparatus.

**WARNING:** The mains plug is used as disconnect device, the disconnect device shall remain readily operable.



- This lightning flash with arrowhead symbol within an equilateral triangle is intended to alert the user to the presence of non-insulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock.

- Warning: To reduce the risk of electric shock, do not remove cover (or back) as there are no user-serviceable parts inside. Refer servicing to qualified personnel.

- The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance instructions in the literature accompanying the appliance.

Apparatus with class I construction shall be connected to a mains socket outlet with a protective earthing connection.

## Content

<b>Safety Information</b> .....	1
<b>CONTENT</b> .....	2
<b>TV Specification</b> .....	3
<b>Accessories</b> .....	4
<b>Overview of back panel</b> .....	5
<b>Remote-Control unit</b> .....	6
<b>Home Page</b> .....	9
What's New .....	9
Featured APP .....	9
Apps .....	10
Sports & Music .....	12
Setting .....	12
Media Player .....	20
<b>TV Apps</b> .....	25
INPUT SOURCE .....	25
Main Menu .....	26
<b>Troubleshooting</b> .....	36

## TV Specification

Screen size	22"
Display Type	TFT LED
Resolution	1920 X 1080
Aspect Ratio	16:9
Alimentation	DC 12V $\equiv$ 4A
Audio Output	L/R 5W X 2
Dimensions(With stand)	584.0 x 382.2 x 54.0MM


Screen size	27"
Display Type	TFT LED
Resolution	1920 X 1080
Aspect Ratio	16:9
Alimentation	DC 12V $\equiv$ 6A
Audio Output	L/R 5W X 2
Dimensions(With stand)	658.4 x 479.0 x 46.0MM

Screen size	32"
Display Type	TFT LED
Resolution	1920 X 1080
Aspect Ratio	16:9
Alimentation	DC 12V $\equiv$ 6A
Audio Output	L/R 5W X 2
Dimensions(With stand)	759.2 x 535.7 x 59.3MM


**Note:**  
Design and specification modification maybe made at any time without prior notice, all data and dimensions are approximations.

## Accessories

Please make sure the following items are included with your LED TV.  
If any items are missing, contact your dealer.

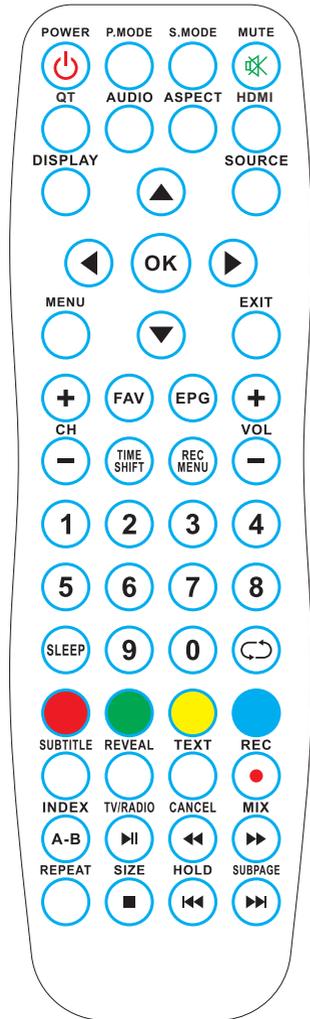


Remote Control

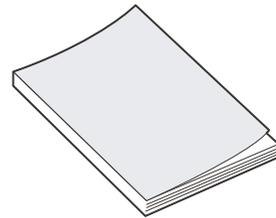


Owner's Instructions

## Overview of back panel

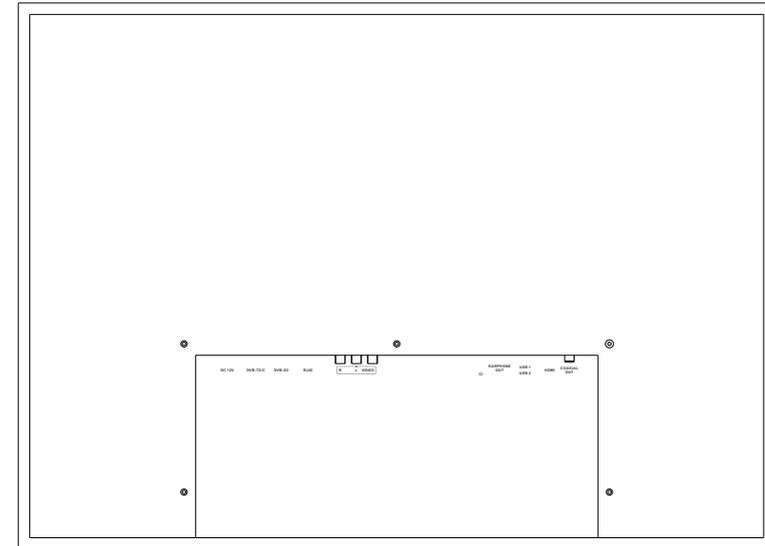

- 1. DC 12V**  
DV 12V input
- 2. DVB-T2**  
Connected to external antenna to receive the ATV/DTV program in ATV/DTV mode.
- 3. DVB-S2**  
Connected to external SATELLITE to receive.
- 4. RJ45**  
Ethernet connection for.
- 5. VIDEO**  
Connecting for VIDEO signal input in Composite mode.
- 6. CI SLOT**  
Used to insert the CI card.
- 7. EARPHONE OUT**  
Connecting for headphone.
- 8. USB 1/2**  
Connecting for HDMI signal.
- 9. HDMI**  
Connecting for HDMI.
- 10. COAXIAL OUT**  
Coaxial Digital audio output.

## Remote-Control unit

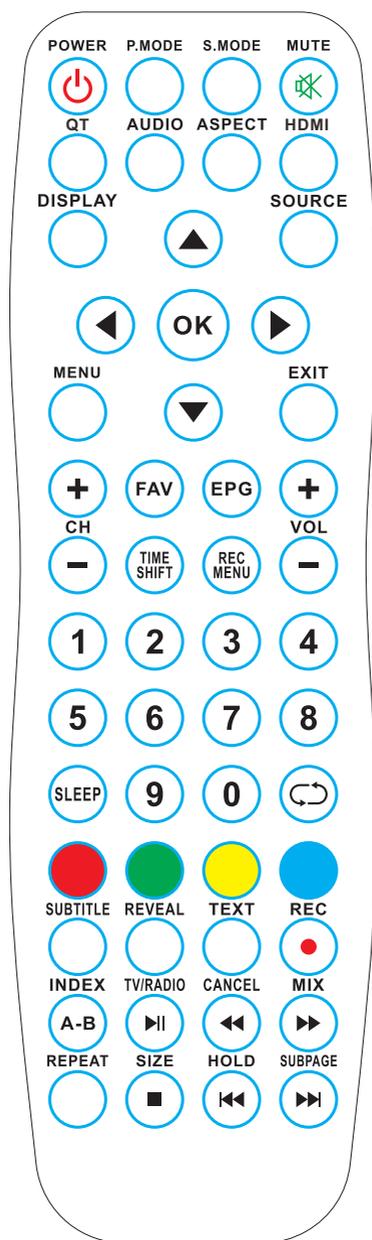

No.	Button	Description
1	<b>POWER</b>	Set your TV to power on or standby mode.
2	<b>P.MODE</b>	Select the picture mode.
3	<b>S.MODE</b>	Select the sound mode.
4	<b>MUTE</b>	Press to mute the sound. Press again to regain sound.
5	<b>QT</b>	Quick Tune. Quick TV Channel Autotune Button.
6	<b>AUDIO</b>	Press to display the language of the audio in DTV.
7	<b>ASPECT</b>	Press this button to select the aspect of screen.
8	<b>HDMI</b>	Press this button to select the HDMI.
9	<b>DISPLAY</b>	Press this button to display the information on current input.
10	<b>SOURCE</b>	Press this button to display the input source.
11	<b>MENU</b>	Allows you to navigate on the screen menus (OSD).
12	<b>EXIT</b>	Exit from the current menu or sub-menu.
13	◀▶ ▲▼	Allows you to navigate the on-screen menus and adjust the system settings to your preference.
14	<b>FAV</b>	Selects favorite channels.
15	<b>EPG</b>	Press to display EPG (Electronic Program information).
16	<b>TIME SHIFT</b>	Press to switch to TIME SHIFT mode.
17	<b>REC.MENU</b>	Press to switch to REC.MENU immediately (DTV only).
18	<b>CH+/-</b>	Press these two buttons to change channels up/down.
19	<b>VOL+/-</b>	Press these two buttons to increase/decrease the volume.
20	<b>0-9</b>	Press 0-9 to select a TV channel directly. The channel will change after 2 seconds. Applicable for enter page number in TELETEXT mode.
21	<b>SLEEP</b>	Set the time for the TV to turn off automatically.
22	↺	Return to the previously viewed program.
23	<b>R (DELETE)</b>	Delete function button.
24	<b>G (RENAME)</b>	Rename function button.
25	<b>Y (MOVE)</b>	Move function button.
26	<b>B (SKIP)</b>	Skip function button.
27	<b>SUBTITLE</b>	Press to select the subtitle language.
28	<b>REVEAL</b>	Shows hidden words or pages by Teletext.
29	<b>TEXT</b>	Switch on/off of Teletext window.
30	<b>REC/●</b>	Press to record the program immediately.
31	<b>INDEX</b>	Returns to Index page by Teletext.
32	<b>TV/RADIO</b>	Press to switch between DTV and radio programs
33	<b>CANCEL</b>	Switches the Teletext window to the background; only the current page is not visible.
34	<b>MIX</b>	Sets the transparency of Teletext window.


No.	Button	Description
35	REPEAT	DVD: Repeat mode selection.
36	SIZE	Zoom In or Out of the Teletext window.
37	HOLD	Holds on the current Teletext page.
38	SUBPAGE	Displays a sup-page of upper Teletext options.

## Home Page

### what's New


This is the video of recommend and video will be updated in a few days.

Press ◀▶ button to select the video, and then press ENTER key to play video you want

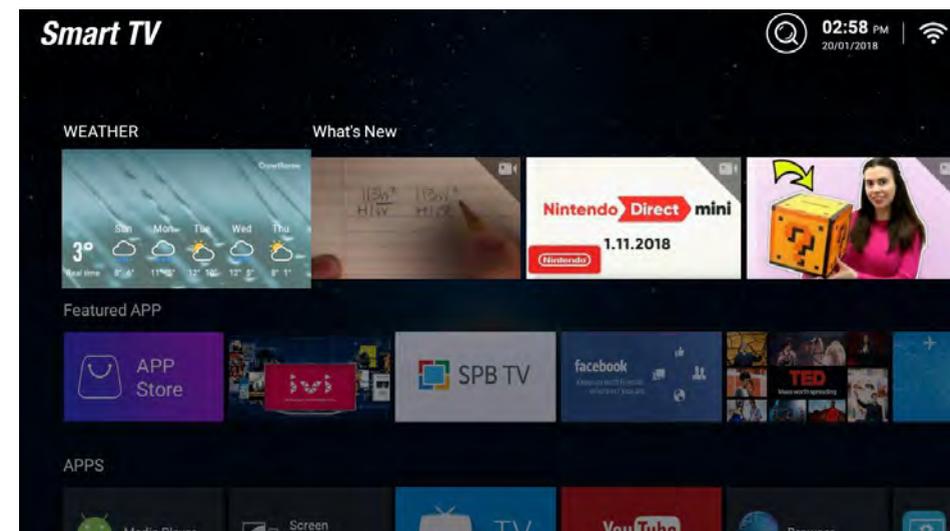


### Featured APP

It is the recommended APPS in the APP Store, press Enter key to download the APPS from the Store, and you can enter to the APP Store to download others APP.

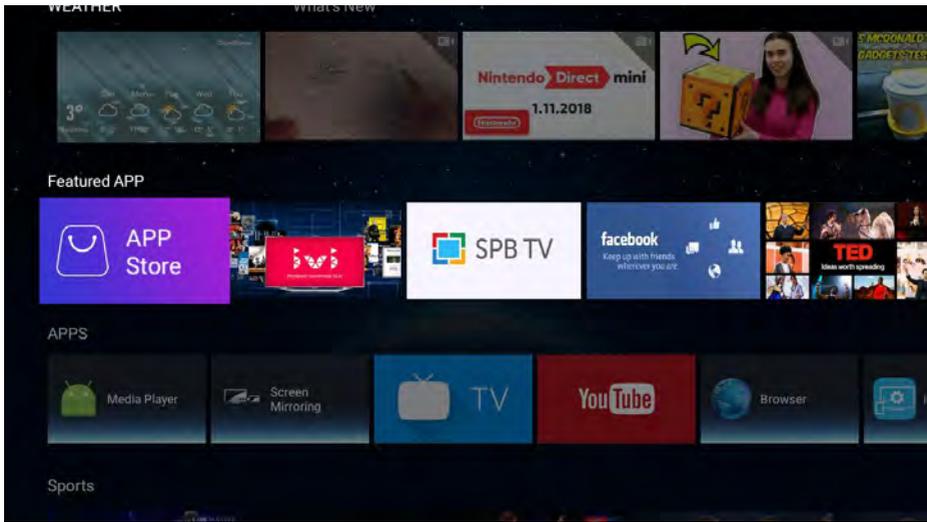

Download NetFlix from the APP Store.

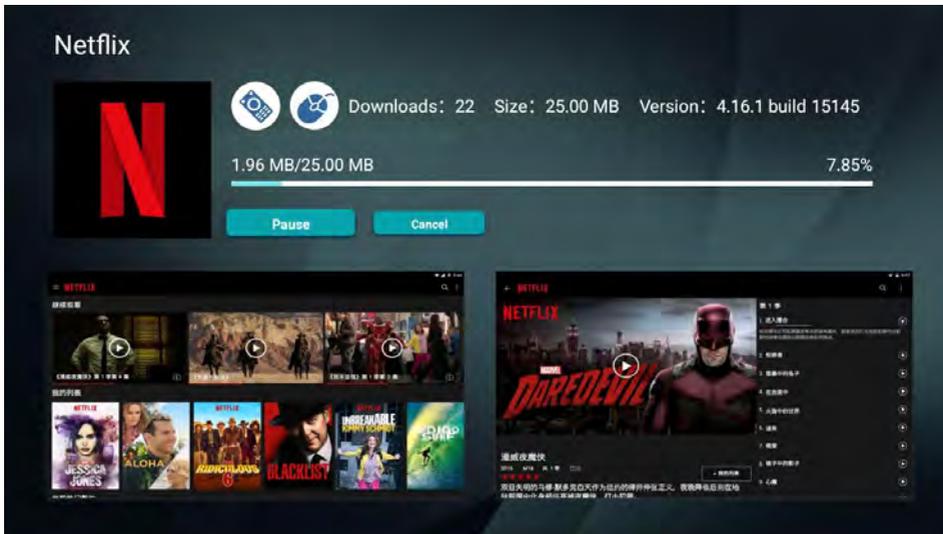


**APPS**

This is part of the system preset and user installation applications. Press ◀/▶ button to select APP, and then press ENTER key to run it.




User can access to the internet by Browser APP.

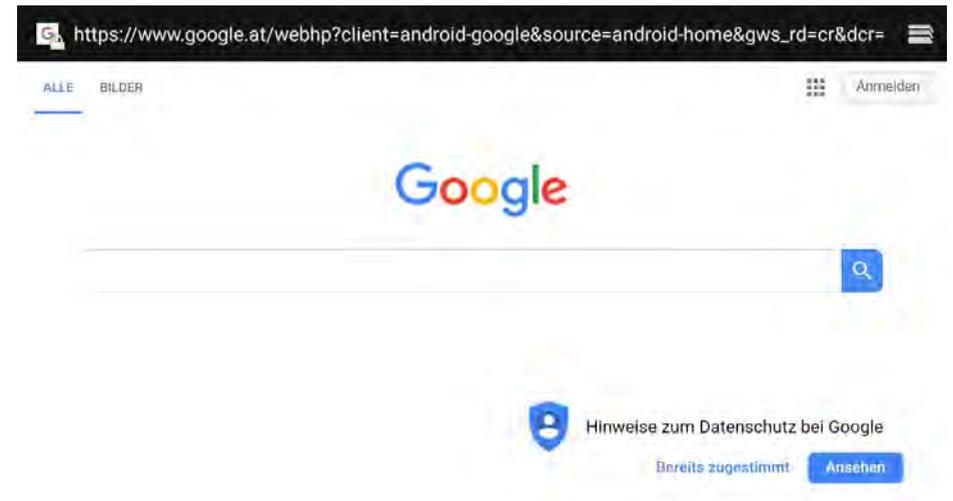

## Sports & Music


This part is a sports and music column.

Press ◀▶ button to select the video, and then press ENTER key to play it.

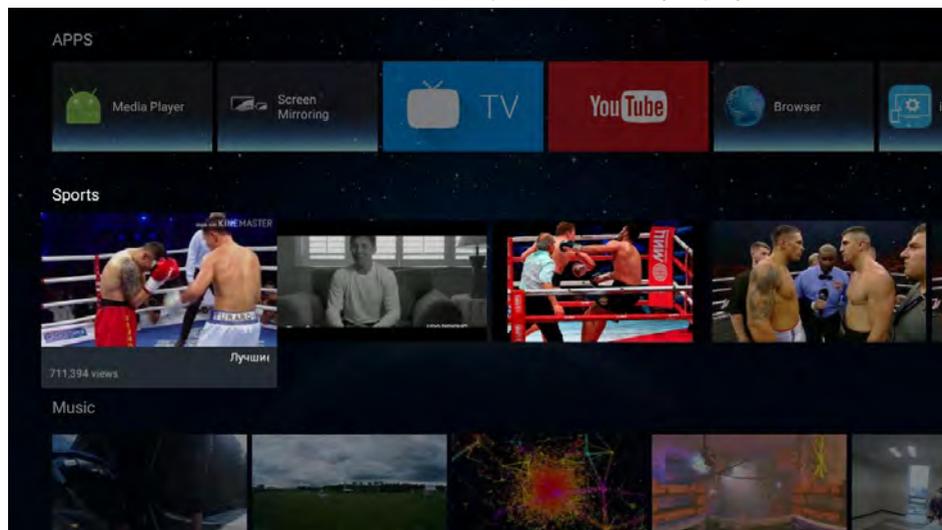

## Setting


Press ENTER key to do system setting.

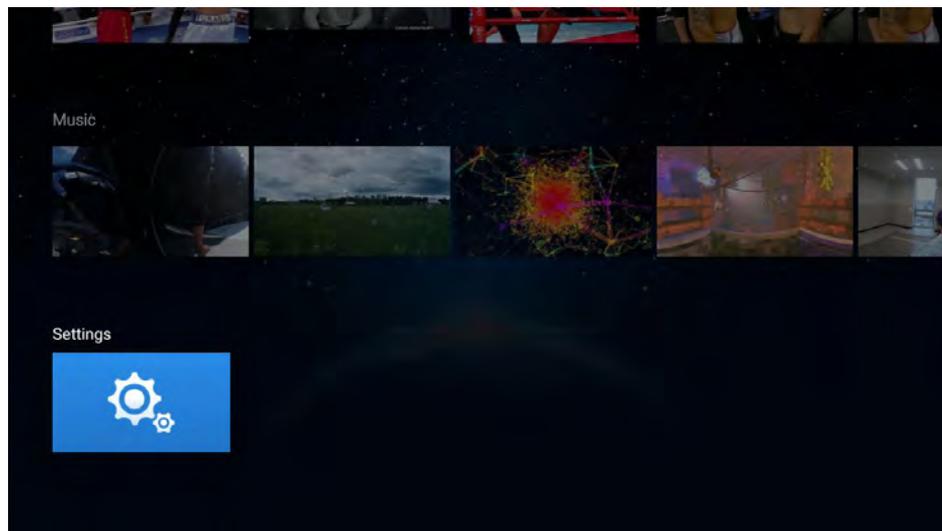

## Network Setting / Bluetooth Setting



Press ▲/▼ button to select the Network that you want to use.

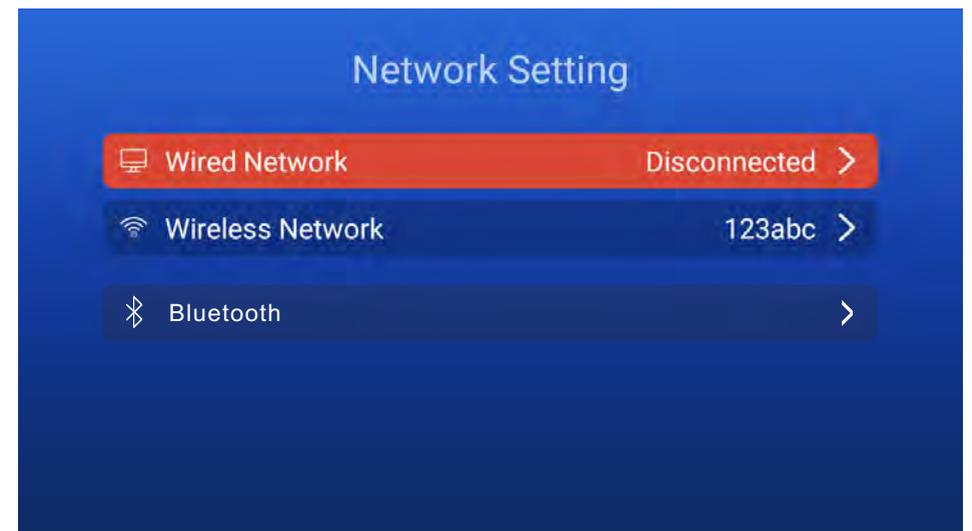

Press ▲/▼ button to select the Bluetooth that you want to use.




## Time Setting


Press ▲/▼ key to select the items, and then press ENTER key to modify it.




## Common

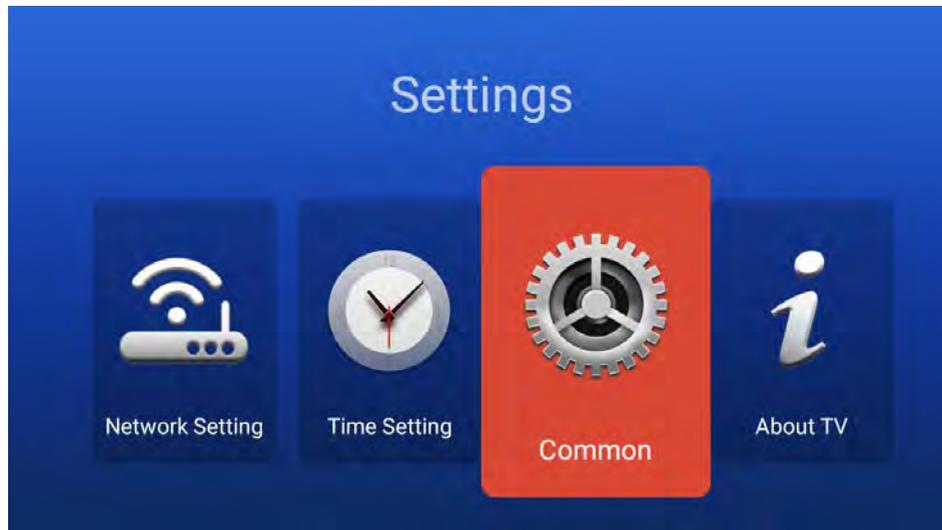


## Language Setting

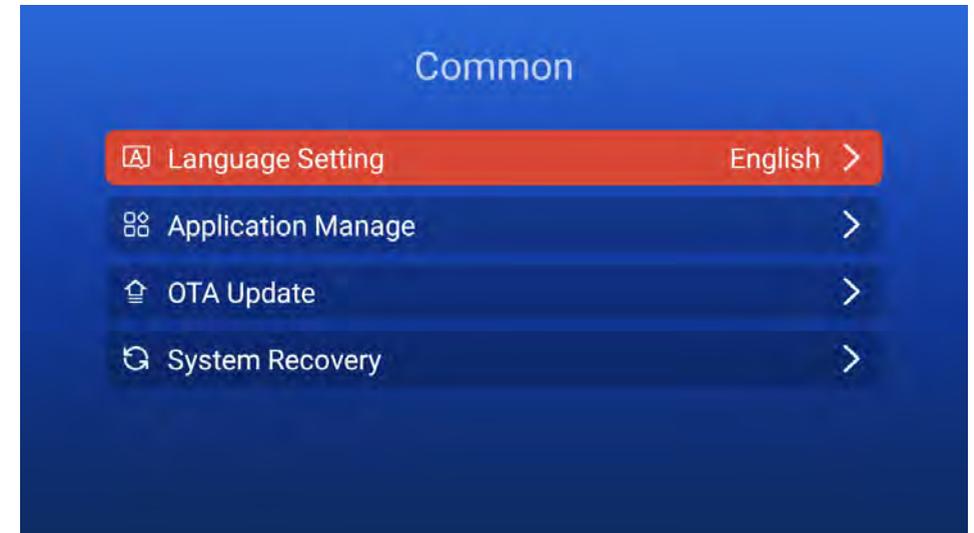

Press ▲/▼ key to select the system Language that you want, and press Enter key to confirm. As the figure shows.

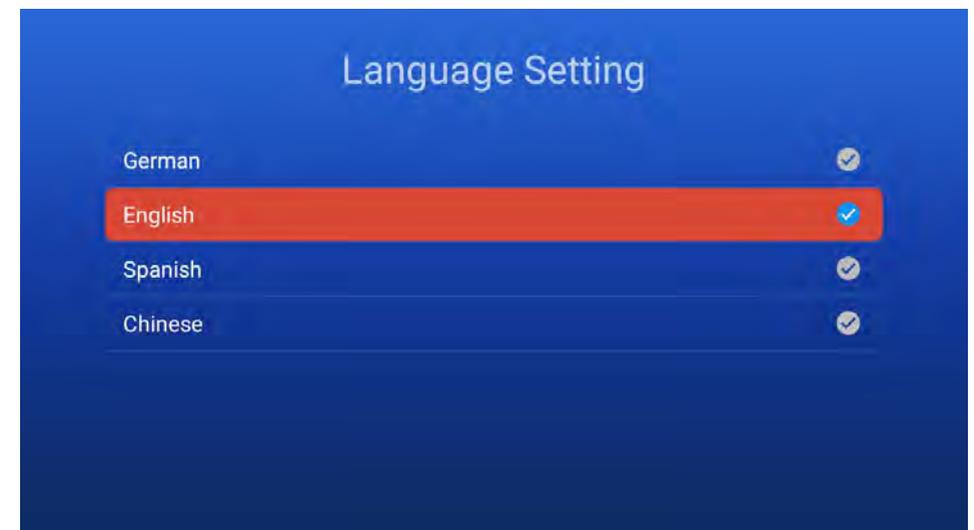


## Application Manage

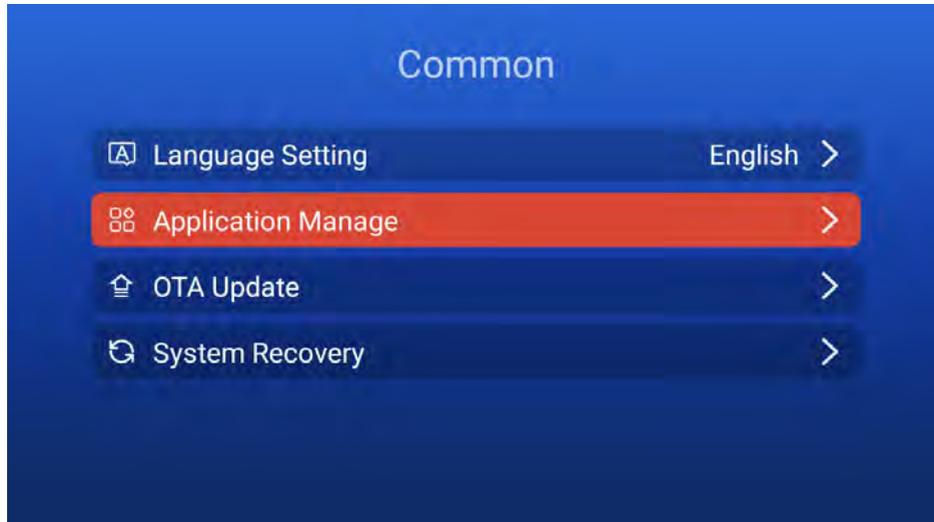

Press Enter key to select that you can know how many apps you have downloaded. You can Uninstall the apps that have downloaded with Uninstalled Applications item. As the figure shows.




## OTA Update

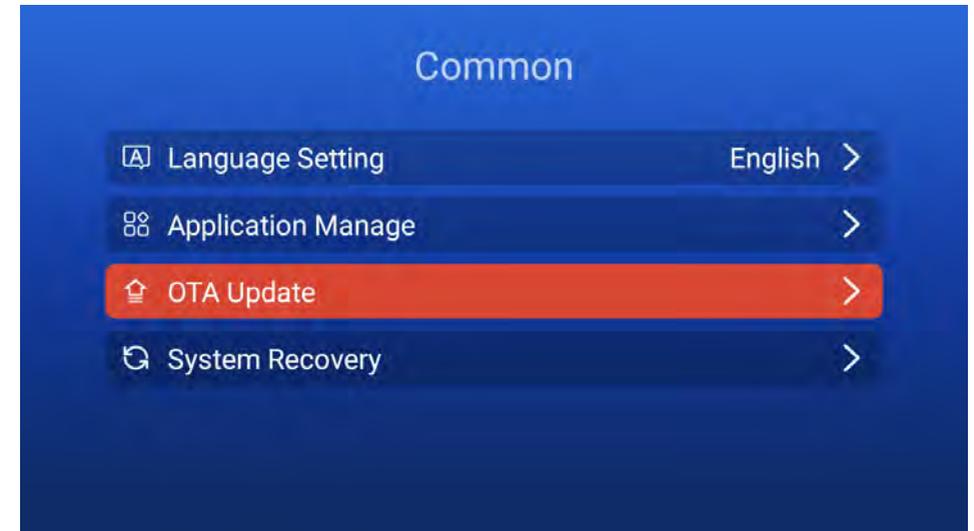

Click the "CHECK FOR UPGRADE" button to check the software update.




## System Recovery

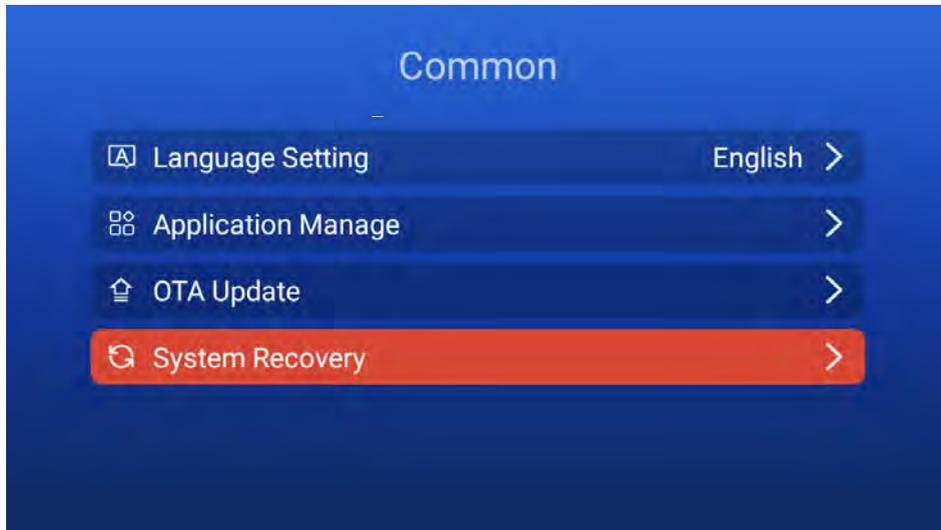

Click the "FACTORY DATA RESET" button to do system Recovery, and all apps you have download will be deleted.



## About TV

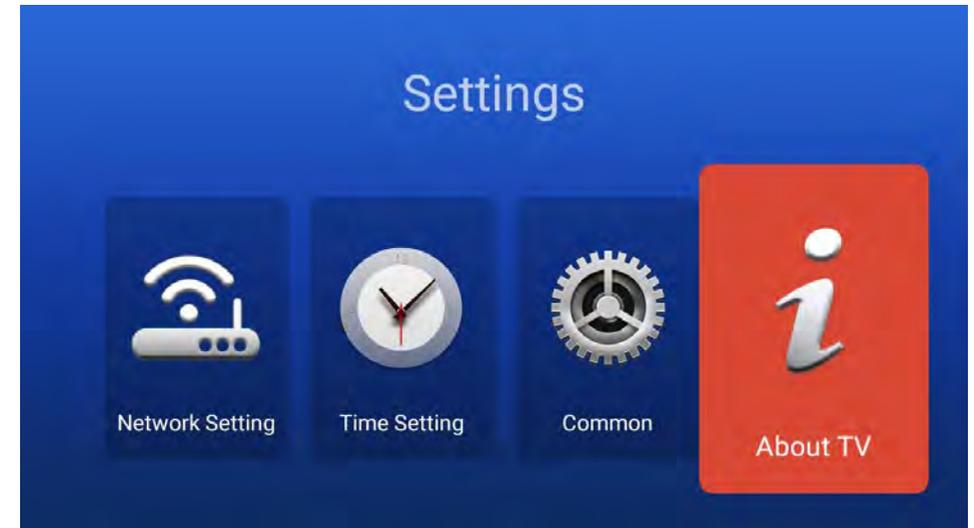

This part is show the system information  
As the figure shows.




## Media Player

Note: Before operation MEDIA menu, Plug in USB device or memory card  
Press ▲/▼ button to select Media Player in the Home Page, and then press ENTER to access.





Press ◀/▶ key to select and press ENTER key to enter

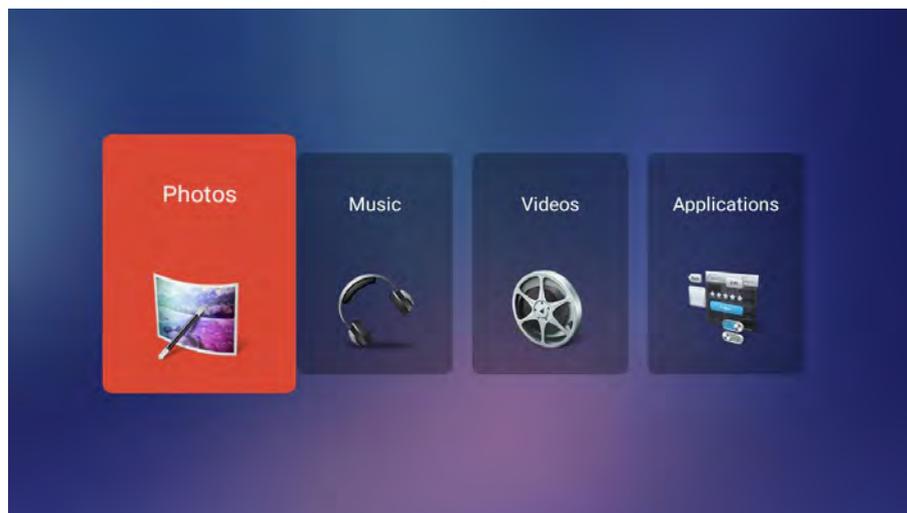

## Photo

The picture is for a reference only; the actual item is the standard.  
Press ◀/▶ button to select Photo in the main menu, and then press ENTER button to enter.  
Press EXIT button to return back to the previous menu.

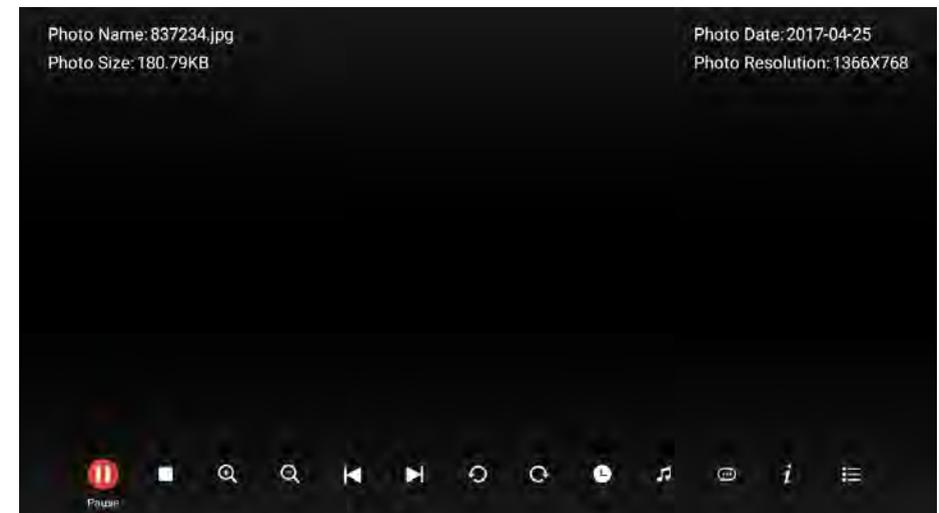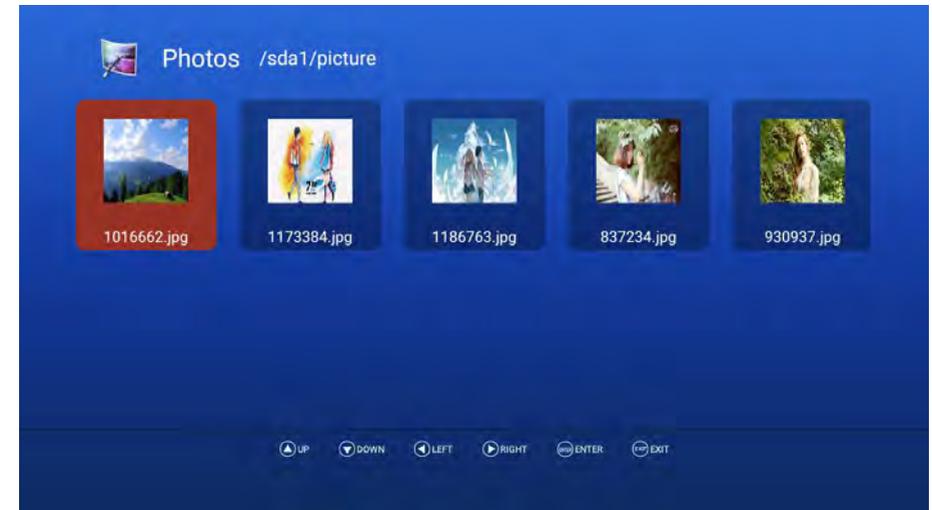

You can see the information of the current playing photo after press INFO button, then press ▶|| button to play or pause, you can see the playing state in the right.

Then press ▲/▼ or ◀/▶ button to rotate the picture.


Notes: Other menu and description are the same as that for Movie menu.

## Music

The picture is for a reference only; the actual item is the standard.

Press ◀/▶ button to select Music in the main menu, and then press ENTER button to enter.

Press EXIT button to return back to the previous menu.

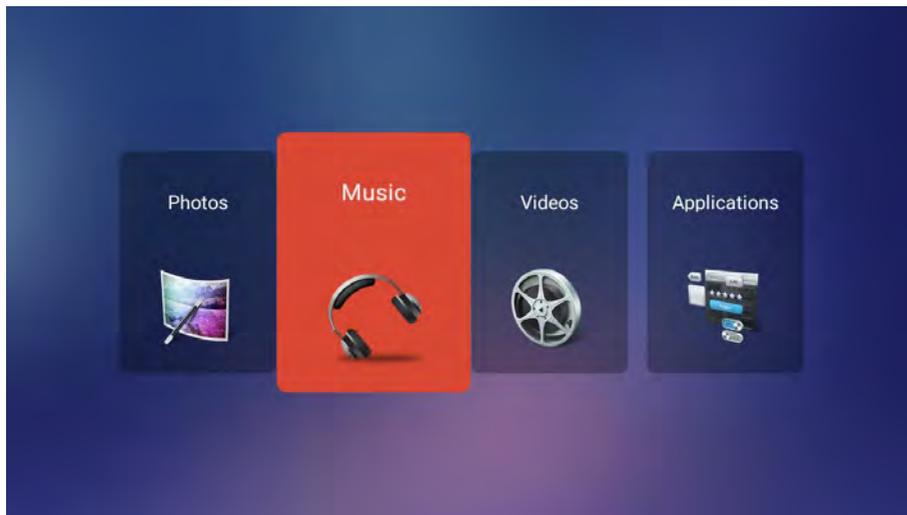

Press ▲/▼ button to select the song you want to listen, and then press ENTER or ▶||▶ button to play.

Press ◀ button to return back to the previous menu.



You can see the information of the current playing song at the left of the menu.




## Video


The picture is for a reference only; the actual item is the standard.

Press ◀/▶ button to select Video in the main menu, then press ENTER button to enter.

Press EXIT button to return back to the previous menu.

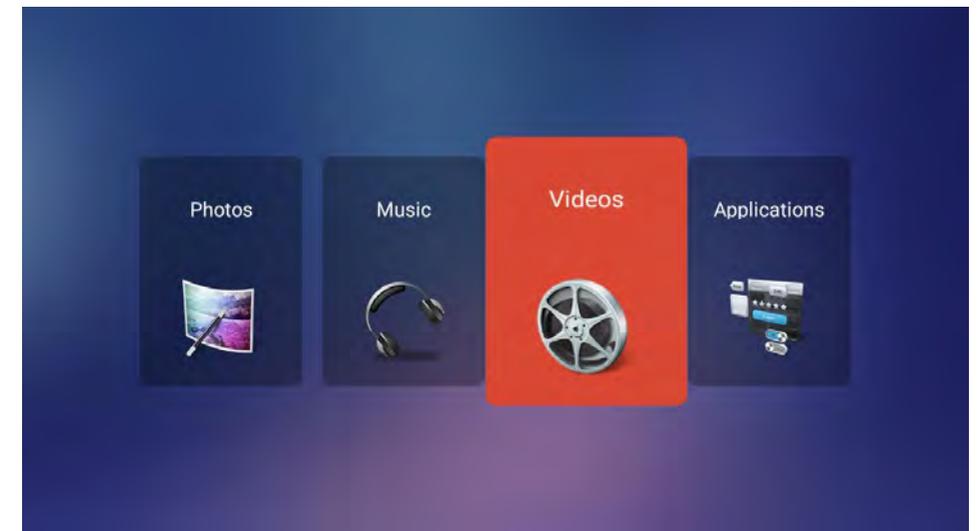


Press ◀/▶ and ▲/▼ button to select the folder that you want to view.  
Press ENTER button to select the sub folder.

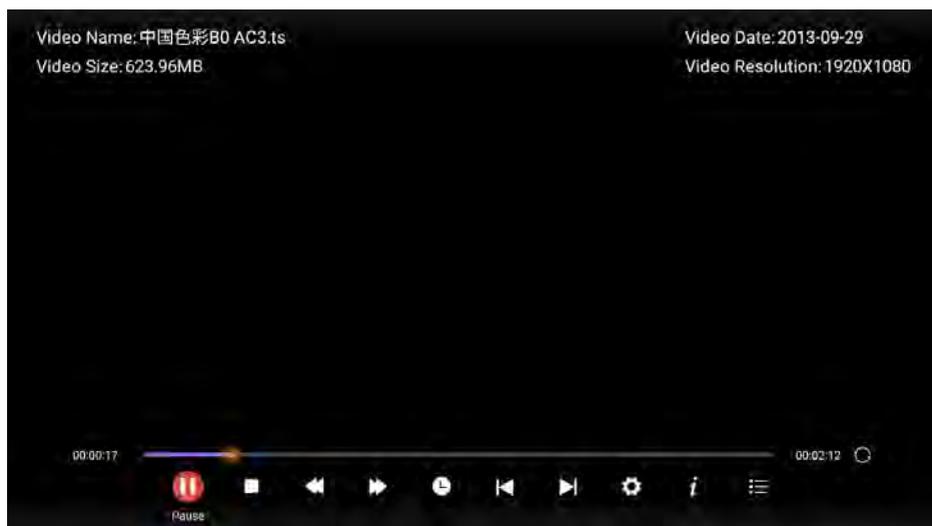

Press ENTER button or ▶|| button to play,  
Press ■ button or EXIT button to stop playing.  
Press the ◀ button to return back to previous page.  
You can see the information of the current playing media at the first few second or after press INFO button.

## Applications

The picture is for a reference only; the actual item is the standard.  
Press ◀/▶ button to select Application in the main menu, then press ENTER button to enter K you can install applications by this selection.  
Press EXIT button to return back to the previous menu.

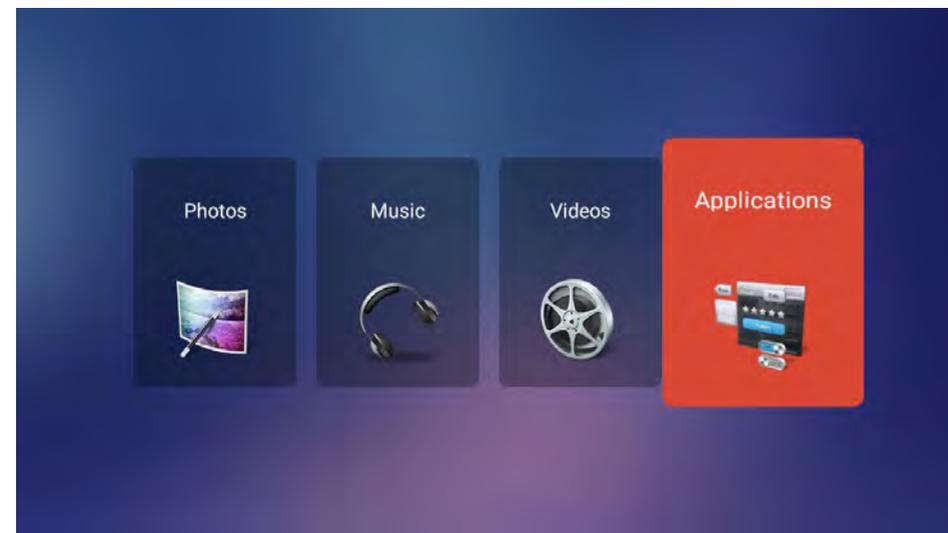

## TV Apps

### INPUT SOURCE

1. Press SOURCE button to display the input source list;
2. Press ▲/▼ button to select the input source you want to watch;
3. Press ENTER button to enter the input source;



## Main Menu


Press MENU button to display the MAIN OSD MENU;

Press ▲/▼ button to select the MENU you want;


Press ENTER button or ► button to enter the sub menu, and press ◀ button to return back to the previous menu.

Press ▲/▼ button to select the option and then press ENTER button or ► button to enter the submenu, press ◀/▶ button to adjust the value or press ◀/▶ button to select in the sub menu;

You can press EXIT button to save and return back to the previous menu, and press EXIT button to exit the entire menu.

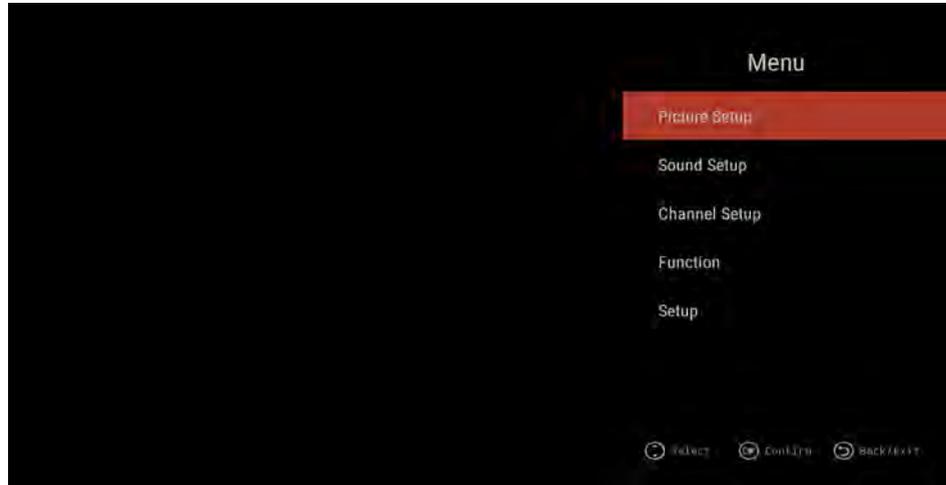

## Picture Setup

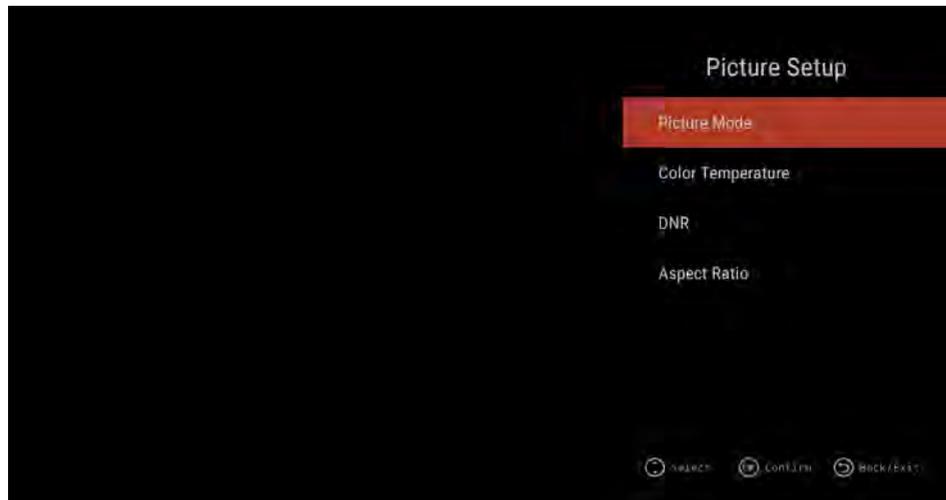


## Picture Mode

Press ▲/▼ button to select Picture Mode, then press ENTER button to enter. (Available Picture Mode: Standard, Dynamic, Mild, User)

You only can adjust the value of brightness, contrast, sharpness, color, when the picture is in User mode.

TIPS: You can press P-MODE button on the remote control again and again to change the picture mode directly.

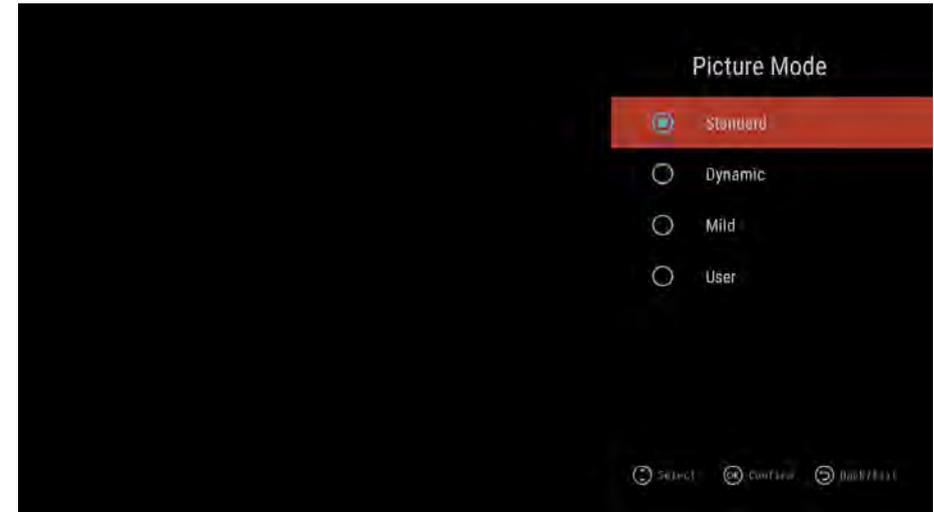

## Colour Temperature

Press ▲/▼ button to select Colour Temperature, then press ENTER button to enter and ◀/▶ button to select Standard, Cool, Warm.

## DNR


Press ▲/▼ button to select DNR, and then press ENTER button to enter and ◀/▶ button to select Off, Low, Middle, High.

## Aspect Ratio

Press ▲/▼ button to select Aspect Ratio, then press ENTER button to enter and press ◀/▶ button to adjust. Then press EXIT button to return back the previous menu directly.

## Sound Setup

1. Press ▲/▼ button to select the option that you want to adjust in the Sound menu, then press ENTER button to enter.
2. press ◀/▶ button to adjust or press ▲/▼ to select, and press ENTER button to select submenu.
3. After finishing your adjustment, Press MENU button to save and return back to the previous menu, or press EXIT button to exit the entire menu.

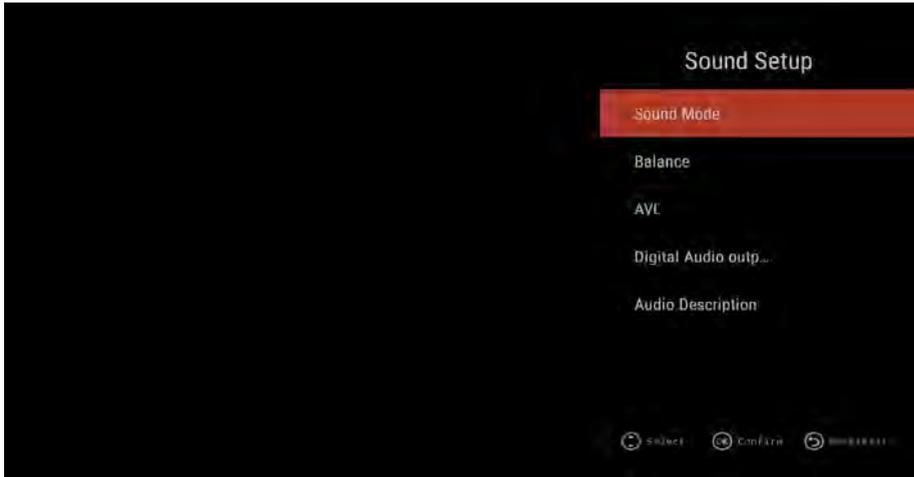


### Sound mode

Press ▲/▼ button to select Sound mode, and then press ENTER button to confirm. (Available Sound mode: Standard, Movie, Music, User).

You can adjust the value of bass and treble, when the sound is in User mode.

TIPS: You can press S-MODE button on the remote control to change the Sound Mode directly.

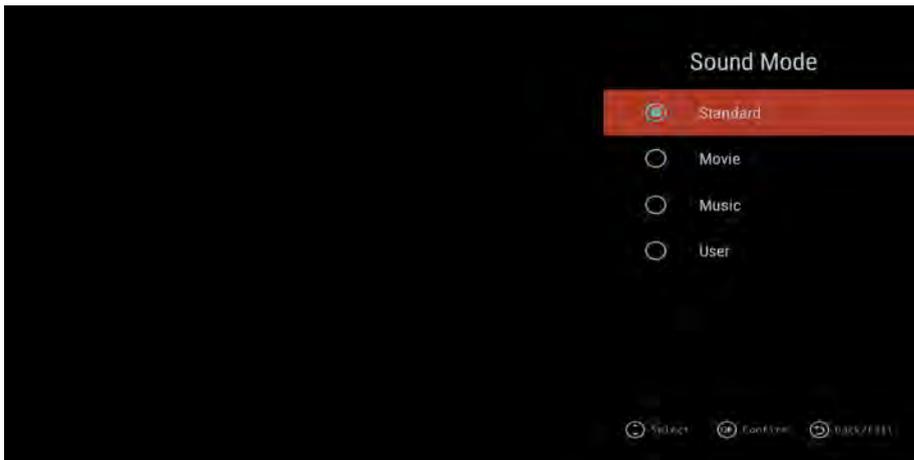

### Balance

Press ▲/▼ button to select Balance, then press ◀/▶ button to adjust. Then press EXIT button to return back the previous menu directly.

### AVL

Press ▲/▼ button to select AVL, then press ENTER button to adjust. Then press EXIT button to return back the previous menu directly.

### Digital Audio output

Press ▲/▼ button to select SPDIF Output, then press ENTER button to confirm (Available SPDIF mode: AUTO, PCM, OFF)

Then press ENTER button or ▶ button to enter and press ◀/▶ button to adjust, then press MEXIT button to return back the previous menu directly.

### Audio Description


Press ▲/▼ button to select Audio Description then press ENTER button to adjust (Available AD ON/OFF)

When you select AD ON, you can press ◀/▶ button to adjust Mixing Level.

## Channel Setup

Press MENU button to display the main menu.

Press ▲/▼ button to select Channel Setup in the main menu, then press ENTER to enter.

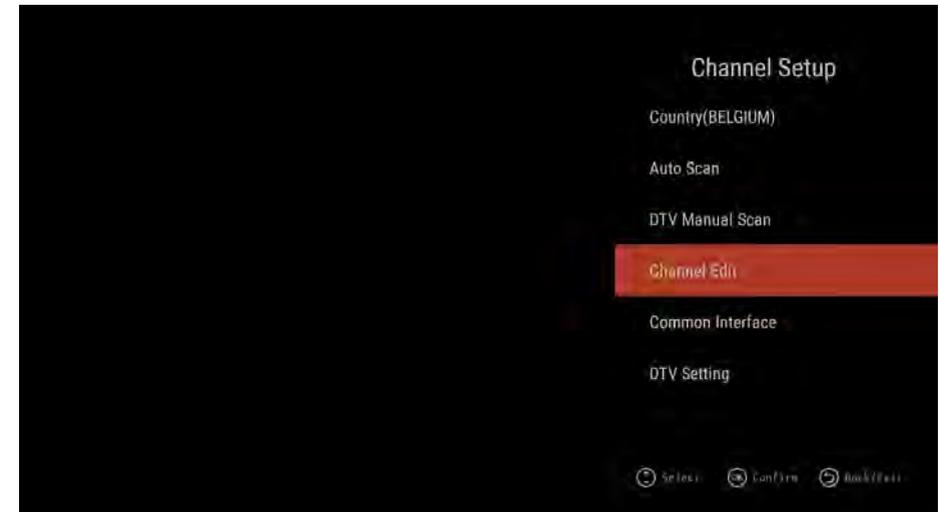


1. Press ▲/▼ button to select the option that you want to adjust in the Channel Setup menu, then press ENTER to enter.
2. After finishing your adjustment, press EXIT button to save and return back to the previous menu and press EXIT button to exit the entire menu.

### Country

Press ▲/▼ button to select Country , and then press ENTER button to confirm

### Auto Search

Press ▲/▼ button to select Auto Search , and then press ENTER button to do auto search

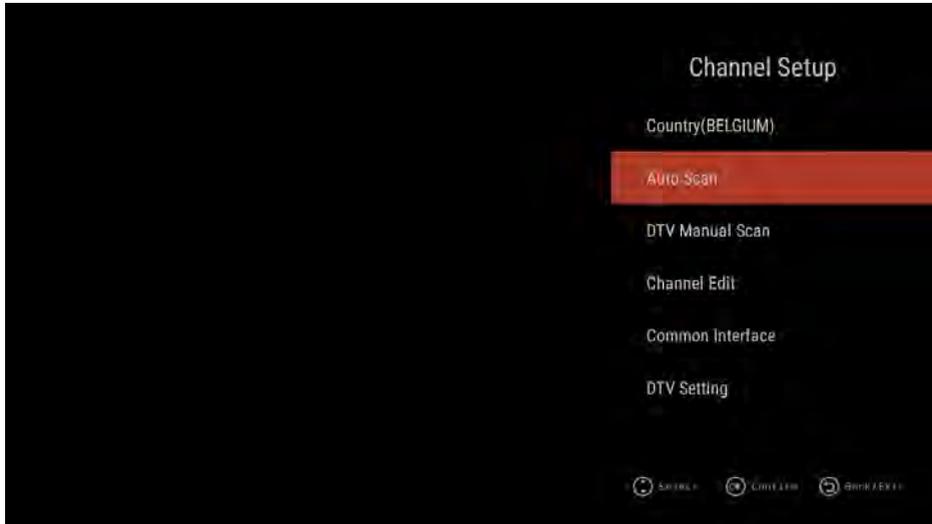

### DTV Manual Scan

Press ▲/▼ button to select ,press ◀/▶ button to adjust, and then press EXIT button to return pre.menu ,The menu will appear as follows:



### channel Edit

Press ▲/▼ button to select channel Edit , and then press ENTER button to enter,you can use the Four Color keys to do Delete/Skip/Swap/Lock function,and press Fav.Key to set

Fav.channel.The menu will appear as follows:




### Common Interface

Press ▲/▼ button to select Common Interface , and then press ENTER button to enter. You can check the CAM/CI card information by this menu.

### DTV Setting

Press ▲/▼ button to select DTV Setting , and then press ENTER button to enter, The menu will appear as follows:

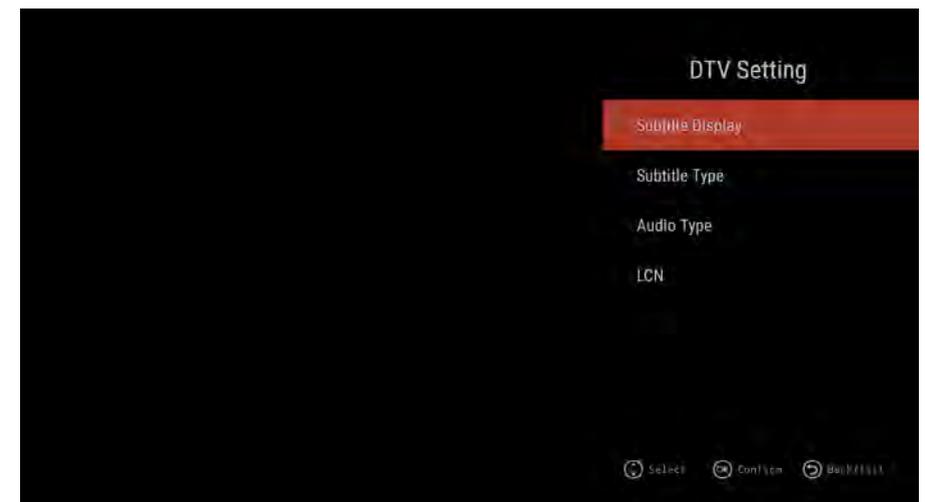

### Subtitle Display

Press ENTER key to enter the sub-menu, you can Press ENTER Key to select Subtitle ON/OFF,

When the subtitle set to ON, you can select subtitle language by Subtitle language item

Press EXIT button to return pre.menu

### Subtitle Type

Press ENTER key to enter the sub-menu, you can Press ENTER Key to select Normal subtitle or the subtitle for Hard of Hearing

Press ENTER key to select Prefer Subtitles 1/Prefer Subtitles 2

Press EXIT button to return pre.menu

### Audio Type

Press ENTER key to enter the sub-menu, you can Press ENTER Key to select Normal Audio or the Audio for Hard of Hearing

Press ENTER key to select Prefer Audio 1/Prefer Audio 2

Press EXIT button to return pre.menu


### LCN

Press ENTER key to enter the sub-menu, you can Press ENTER Key to select LCN ON/OFF

Press EXIT button to return pre.menu

### Function

Press ▲/▼ button to select Function , and then press ENTER button to enter

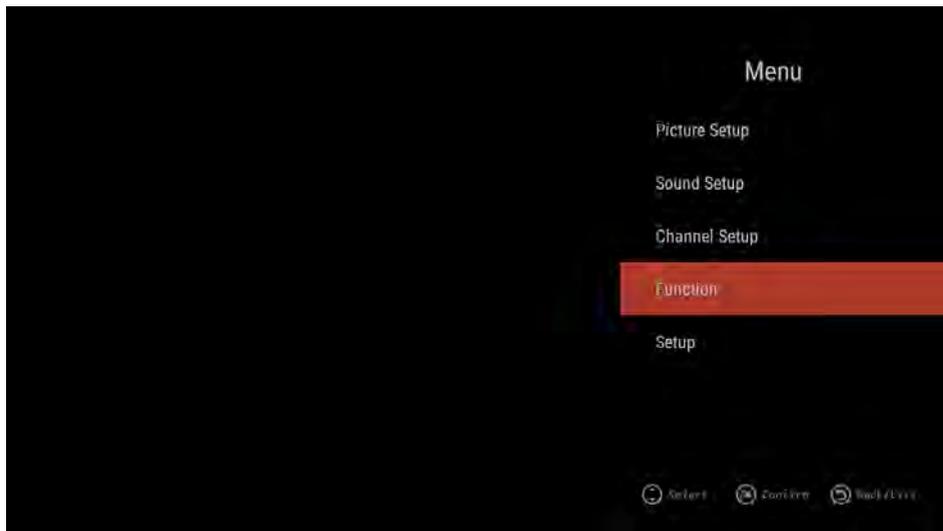

### Teletext Language

Press ENTER key to enter the sub-menu,you can Press ENTER Key to select the Teletext Language(West Europe/East Europe/Russian/Arabic)


Press EXIT button to return pre.menu.

### System Lock

Press ENTER key to enter the sub-menu,you will see a graphic as follows:


Enter the default PIN 0000 ,will enter the Parental controls menu.

Press EXIT button to return pre.menu.

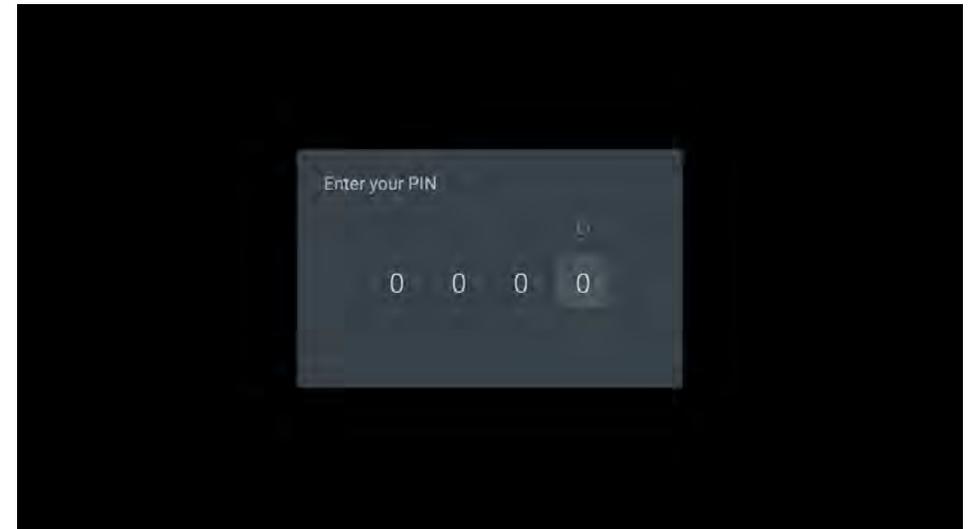

### Parental controls

Press ▲/▼ button to select the ON/OFF,RATING/Change PIN item and Press ENTER button to confirm

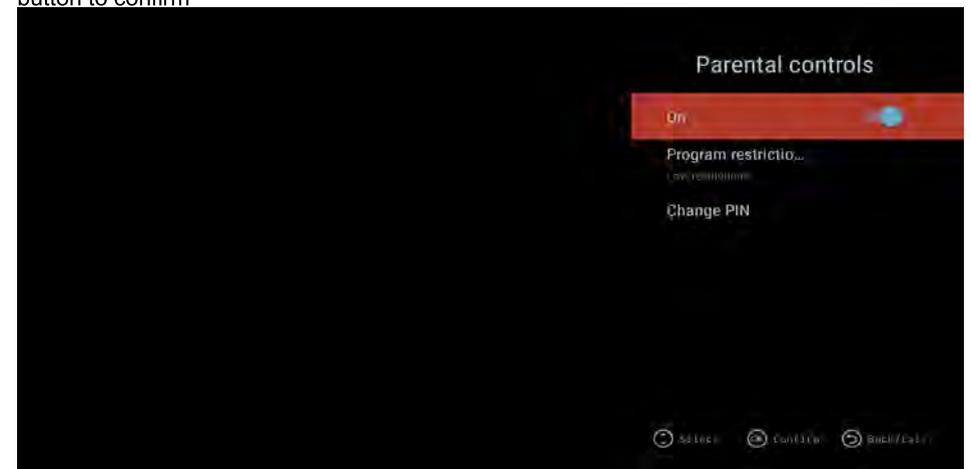

#### Auto Power Down

Press ENTER key to enter the sub-menu,  
Press ▲/▼ button to select Off/1 hour/2 hour/3 hour/4 hour item and then press ENTER button to confirm  
Press EXIT button to return pre.menu.

#### Record Menu(DTV Source only)



Press ENTER key to enter the sub-menu,you will see a graphic as follows:  
Press ▲/▼ button to select the items and then press ENTER button to set.



#### CEC

Press ENTER key to enter the sub-menu,  
Press ▲/▼ button to select HDMI Control /Device auto power off/TV auto power on/ARC enable item and then press ENTER button to change  
Press EXIT button to return pre.menu.

#### Setup

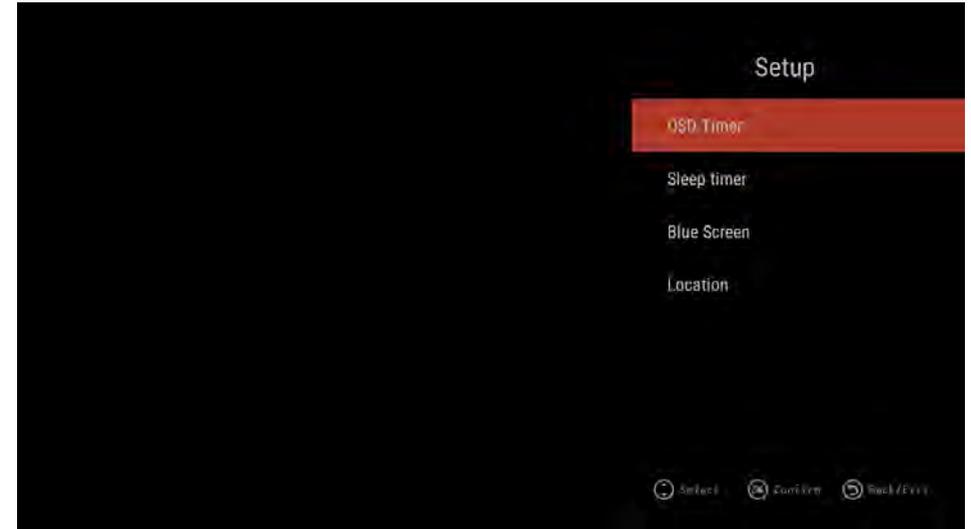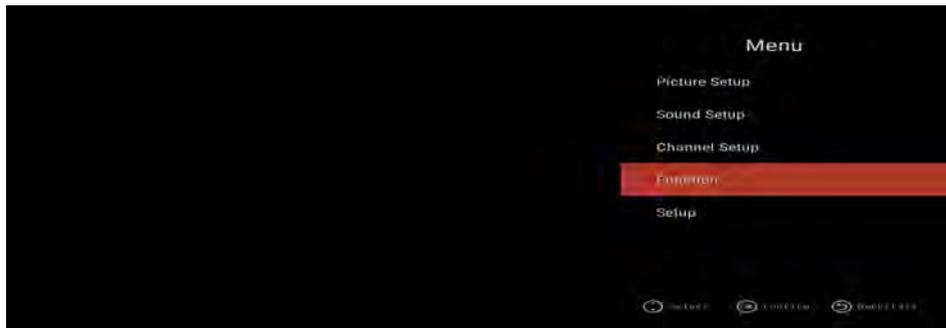

#### OSD Timer (OSD display time)

Press ▲/▼ button to select OSD Timer  
Press ENTER button to enter  
Press ▲/▼ to select Off/10s/20s/30s/40s/50s/60s items and then press ENTER button to confirm  
Press EXIT button to return pre.menu.

#### Sleep Timer(power off time)

Press ▲/▼ button to select Sleep Timer  
Press ENTER button to enter  
Press ▲/▼ to select Off/00:15/00:30/01:00/01:30/02:00/03:00 items and then press ENTER button to confirm  
Press EXIT button to return pre.menu.

#### Blue Screen

Press ▲/▼ button to select Blue Screen  
Press ENTER button to enter and then press ENTER button to change the ON/OFF selection  
Press EXIT button to return pre.menu.

#### Location

Press ▲/▼ button to select Location  
Press ENTER button to enter and then press ENTER button to change the Home/Store selection  
Press EXIT button to return pre.menu.

## Troubleshooting

Problem	Possible cause	Possible solution
No picture and sound.	<ul style="list-style-type: none"> <li>The power adaptor is not plugged in or not working.</li> <li>The wrong input source is selected.</li> <li>The input source has failed to connect with the TV or is not turned on.</li> </ul>	<ul style="list-style-type: none"> <li>Plug the power adaptor into a suitable outlet. Try both the 12/24V &amp; 240V adaptors</li> <li>Select the correct input source.</li> <li>Make sure the input source is correctly connected and turned on.</li> </ul>
No sound.	<ul style="list-style-type: none"> <li>The volume control is set to minimum.</li> <li>The mute  button on the remote control has been pressed</li> <li>An incorrect sound system mode is set.</li> </ul>	<ul style="list-style-type: none"> <li>Press the  button to increase the volume.</li> <li>Press  or the (or  ) button to restore/increase the volume.</li> <li>Set a correct sound system mode from the main menu to match your TV source.</li> </ul>
No picture, or monochrome picture only.	<ul style="list-style-type: none"> <li>The colour system setting does not match the program.</li> <li>The sound system setting does not match the program.</li> </ul>	<ul style="list-style-type: none"> <li>Select the appropriate colour system setting.</li> <li>Select the appropriate sound system setting. (If unsure, use Auto settings where available).</li> </ul>
Sound or picture interference.	<ul style="list-style-type: none"> <li>Some equipment that causes interference is close to the TV.</li> <li>More than one device is plugged into the same power outlet.</li> <li>An incorrect sound system mode is set.</li> </ul>	<ul style="list-style-type: none"> <li>Keep interference-causing equipment away from the TV.</li> <li>Plug the power adaptor into another, separate power outlet.</li> <li>Set a correct sound system mode from the main menu to match your TV source.</li> </ul>
PVR recording failed, or "DISK NOT READY" is displayed.	<ul style="list-style-type: none"> <li>You may not have removed your USB device after the last recording, which is necessary to protect the device from damage.</li> </ul>	<ul style="list-style-type: none"> <li>Remove the USB device after each recording if you experience recording problems. If "DISK NOT READY" is displayed, remove the device, reconnect and then proceed with your recording.</li> </ul>

Problem	Possible cause	Possible solution
DTV Picture Pixelation	<ul style="list-style-type: none"> <li>Poor Signal</li> </ul>	<ul style="list-style-type: none"> <li>Adjust the position or orientation of the TV antenna.</li> <li>Check the antenna connection from the wall plate to the TV.</li> <li>Try re-tuning the channels as the channel frequencies may be different in some areas.</li> </ul>

**NOTE:** Thank you for purchasing a SplashVision quality TV. Our products have been designed with over 12 years of engineering excellence and are designed of the highest quality standard in the Bathroom and Outdoor segments. Should you encounter any problems that cannot be easily addressed within this instruction manual please feel free to contact us via our website [www.splashvision.tv](http://www.splashvision.tv).